

Chapter 1  
Introduction

Chapter 2  
Preparation


Chapter 3  
Basic Operations

Chapter 4  
Advanced Operations

Chapter 5  
Editing

Chapter 6  
Additional Information

## EV-C45E

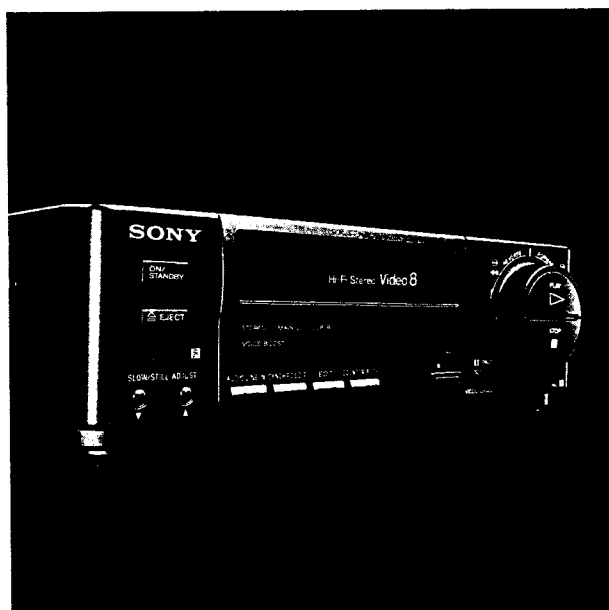

## *Video Cassette Recorder*

### *Operating Instructions*

Before operating the unit, please read this manual thoroughly and retain it for future reference.

## Video 8™

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

### NOTICE FOR THE CUSTOMERS IN THE UNITED KINGDOM

If the plug supplied with this appliance is not suitable for the socket outlet in your home, it should be cut off and an appropriate plug fitted.

### IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

Should the fuse in the plug supplied with this appliance need to be replaced, a 5 AMP FUSE approved by ASTA to BS 1362, ie carries the  mark, must be used.

### WARNING

To prevent shock hazard, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be discarded.

#### Caution

Television programmes, films, video tapes and other materials may be copyrighted.

Unauthorized recording of such material may be contrary to the provisions of copyright laws.

Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

# Welcome!

Congratulations on your purchase of the Sony EV-C45E Video Cassette Recorder.  
This Video cassette recorder is the result of our commitment to bring Sony customers high  
quality and state-of-the-art technology.  
Thank you for choosing Sony.

## Table of Contents

Warning .....	2	Cutting out the Unwanted Scenes .....	
Precautions .....	4	– SHUTTLE EDIT .....	19
<b>Chapter 1 Introduction</b>		During Recording .....	19
Features .....	5	During Playback .....	20
<b>Chapter 2 Preparation</b>		<b>Chapter 5 Editing</b>	
Hookups and Getting Started .....	6	Overview of the Editing Functions .....	21
Hookup 1 Audio/Video (A/V) Hookup .....	7	Tape Dubbing .....	22
Hookup 2 Aerial Hookup .....	8	Editing from the Other VCR .....	22
Inserting Batteries .....	9	Editing onto the Other VCR .....	24
<b>Chapter 3 Basic Operations</b>		<b>Synchronized Editing</b> .....	25
Playback .....	10	Connecting Video Equipment	
Inserting a Video Cassette .....	10	with the LANC Connector .....	25
Ejecting the Video Cassette .....	10	Connecting Video Equipment	
Cassette Care .....	10	with the CONTROL S connector .....	26
Playing Back a Cassette .....	11	LANC Mode Setting .....	27
Auto Play .....	11	Synchronized Assemble Editing .....	28
Indexing the Tape Contents .....	12	<b>Chapter 6 Additional Information</b>	
Locating a Particular Scene Later .....	12	Identifying the Parts and Controls .....	29
Listening More Easily to Conversation Recorded		Front Panel .....	29
with a Camcorder .....	12	Display Window .....	30
Selecting the Monitor Sound .....	12	Rear Panel .....	30
<b>Recording</b> .....	13	Remote Commander .....	31
Recording a Video Programme while Watching it ...	13	<b>Troubleshooting</b> .....	32
Pausing .....	14	<b>Taking Care of Your EV-C45E</b> .....	33
Selecting the Audio Input		Video Head Cleaning .....	33
from the External Source .....	14	Worn Video Heads .....	33
Recording TV programmes .....	15	Check the Video Heads after 1,000 Hours of Use ..	33
<b>Chapter 4 Advanced Operations</b>		Moisture Condensation .....	33
Variable Speed Playback .....	16	<b>Specifications</b> .....	34
Still Picture .....	16	<b>Index</b> .....	35
Picture Search During Playback .....	16		
Locked Picture Search .....	16		
x 2 (Double), –x 2 (Reverse Double) Speed			
Playback .....	17		
–x 1 (Reverse) Speed Playback .....	17		
Frame-by-Frame Picture .....	17		
Slow Motion Playback .....	18		
Tracking Adjustment .....	18		

# Precautions

## Safety

- For the models designed for UK, operate the unit only on 240V AC, 50 Hz. For the models designed for other European countries, operate the unit on 220-230V AC, 50 Hz.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord itself.
- The unit is not disconnected from the mains (AC power source), as long as it is connected to the mains outlet, even if the unit itself has been turned off.
- The ON/STANDBY indicator lights up red when the VCR is turned off (standby mode), and lights up green when the VCR is turned on (power on mode).

## Installation

- Allow adequate air circulation to prevent internal heat buildup
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Keep the unit away from a TV. Otherwise, it may cause interference with the TV.
- Do not place heavy objects on the unit.

## Operation

- When the unit is not in use, turn the power off to conserve energy and to extend its life.
- Remove and store video cassettes after recording or playback.

## Cleaning


- Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution.
- Do not use any type of solvent, such as alcohol or benzine.

## Recording and Playback

- This VCR uses 8 mm video format cassettes.
- This VCR both records and plays back (see pages 11 and 15) in SP mode (approximately 20.051 mm/second) and LP mode (approximately 10.058 mm/second).
- This VCR does not record in the Hi 8 video system, nor does this VCR play back a tape recorded in the Hi 8 video system on other VCRs.
- The PCM audio feature is not available on this VCR. Therefore, you can neither record in the digital multi system, nor play back a tape recorded in the digital multi system on other VCRs.
- Audio dubbing cannot be performed on this VCR.
- This VCR does not record directly from antenna input, since it does not have a built-in TV tuner.

# Features

## Editing

- **DUAL MODE SHUTTLE ring**  
allows quick access to the desired scene and playback at various speeds in both forward and reverse directions.
- **Control L  (LANC) connector**  
From this jack you can connect to another piece of equipment such as a video camera recorder (camcorder) and control tape transport of both devices from one set of controls. With this simultaneous control you can use bi-directional synchronized editing.
- **CONTROL S INPUT connector**  
This connection allows remote control of this VCR by other Sony video equipment with a CONTROL S OUTPUT jack.

## Function

- **Voice boost function**  
When playing back a tape recorded with a camera recorder (camcorder), voice boost enhances the voice portion of the sound and reduces "unwanted" background noise like wind so that it's easier to listen to conversation.

## How to Use This Manual

This manual is divided into the following six chapters: **Chapter 1** Introduction, **Chapter 2** Preparation , **Chapter 3** Basic Operations, **Chapter 4** Advanced Operations, **Chapter 5** Editing and **Chapter 6** Additional Information. If you are already familiar with the basic operations, skip **Chapter 3** Basic Operations and see **Chapter 4** Advanced Operations.

If you have any problems with installing or operating the EV-C45E, refer to the troubleshooting section first before calling your local Sony dealer.

**When you are reading through the manual, remember:**

- Buttons and switches on the VCR to be used in operating the VCR are called out and shown in uppercase letters in the illustrations.
- Buttons and switches on the Remote Commander to be used for operating the VCR are called out and enlarged in the illustrations.

## Conventions



This indicates a function operated only with the buttons on the VCR itself, but not with those on the Remote Commander.



This indicates a function operated only with the buttons on the Remote Commander, but not with those on the VCR itself.

## Unpacking

Unpack all the items and check to confirm that you have everything listed below.

- Remote Commander RMT-V124 (1)
- Size AA (R6) batteries (2)
- Coaxial cable (1)
- Mains lead (1)
- Plastic adjuster (1)

# Hookups and Getting Started


Before you can use your VCR for the first time, you need to connect it to your TV and set it up to play back video programmes for viewing. This section explains how to hook up, set up, and prepare the remote commander so that you can start enjoy it right away. There are, however, many types of TVs available and many different ways in which your TV can be hooked up. As a result, this manual describes several ways your VCR can be connected.

Use the following table to select the correct hookup for your TV.

When	See
Your TV has audio/video (A/V) inputs	<b>Hookup 1</b> Audio/Video (A/V) Hookup (page 7)
Your TV doesn't have audio/video (A/V) inputs	<b>Hookup 2</b> Aerial Hookup (page 8)

Before making the connections, check the following points:

- Turn off the power to the VCR and TV.
- Do not connect the mains lead until all of the connections are completed.

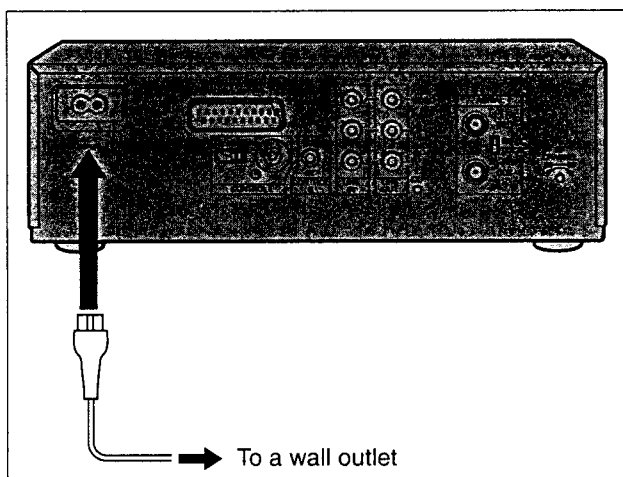

- Make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, consult your nearest Sony dealer or qualified technician.

## Caution

Do not place the VCR near a TV. The playback picture may become distorted.

**X NO!**




# Hookup 1


## Audio/Video (A/V) Hookup

If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. If your TV doesn't have A/V inputs, see the following page for aerial hookup.


### 1A Use hook up 1A if your TV is equipped with stereo-type audio/video inputs jacks.

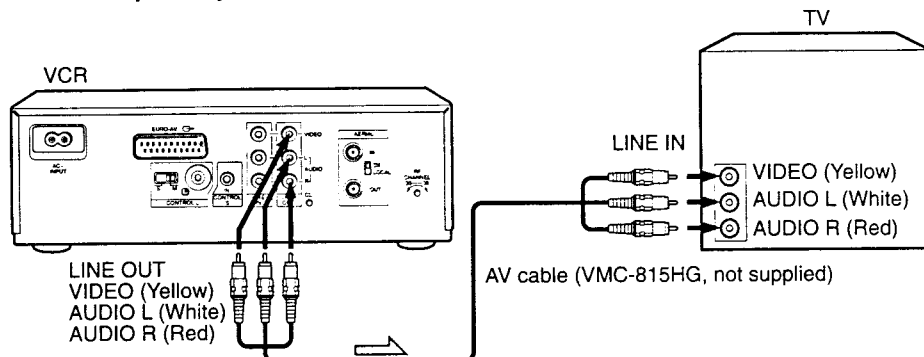


### 1B Use hook up 1B if your TV is equipped with monaural-type audio/video inputs jacks.

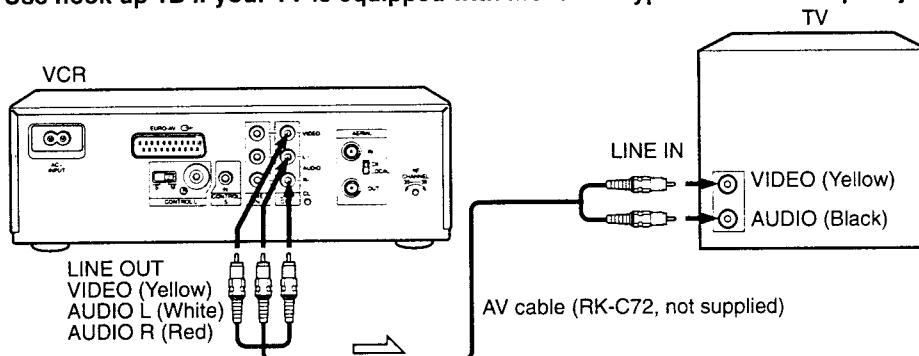

### 1C Use hookup 1C if your TV is equipped with a EURO 21-pin connector. With this connection the VCR can not record TV programmes. It can only playback a pre-recorded video tape.

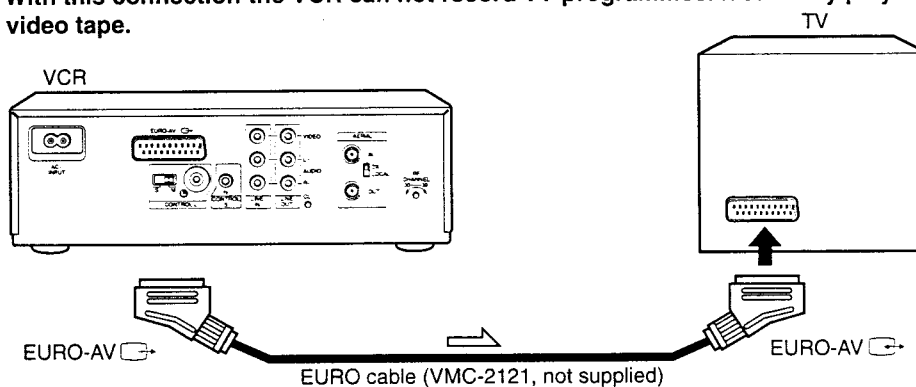


### 1D Use hookup 1D if your TV is equipped with a EURO 21-pin connector and you want to record TV programmes. This hookup allows you to record broadcast programmes received by your TV if the aerial input is directly connected to your TV.

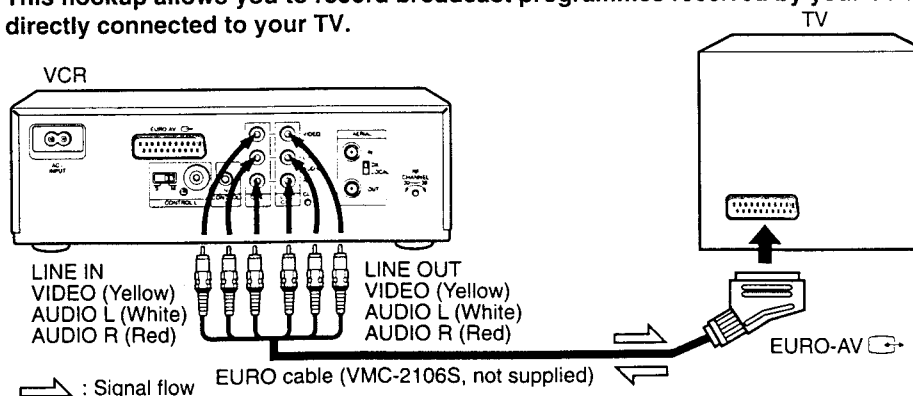

➡ : Signal flow

# Hookup 2

## Aerial Hookup

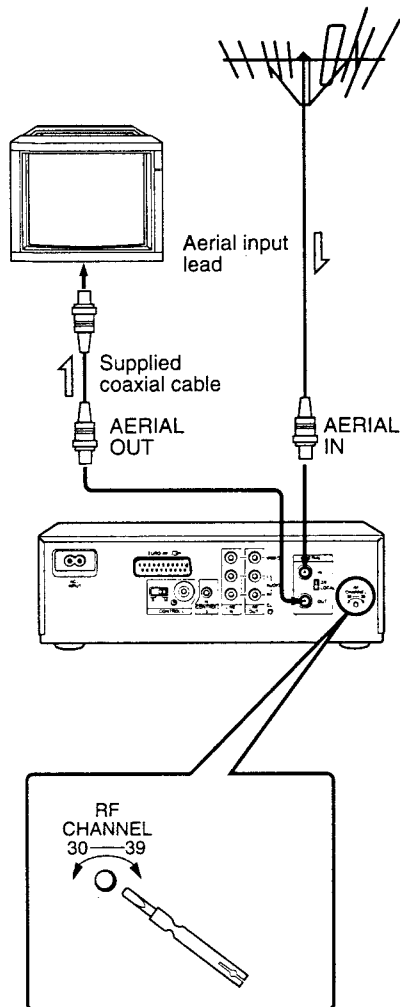

If your TV doesn't have audio/video input jacks or a EURO 21-pin connector, you should make an aerial connection and tune the VCR to your TV.

### Connecting an aerial

- 1 Disconnect the aerial input lead from your TV and connect it to the socket marked "AERIAL IN" on the rear of the VCR.
- 2 Connect the coaxial cable (supplied with the VCR) to the socket marked "AERIAL OUT" on the rear of the VCR and plug it into the aerial input socket of your TV.

### Tuning the VCR to your TV


- 1 Turn on the TV and select an unoccupied programme position.
- 2 Turn on the VCR.
- 3 Insert a pre-recorded cassette and play it back.
- 4 Adjust the TV so that the playback picture will clearly appear on the screen.
- 5 If the playback picture is not free of disturbance, use the supplied plastic adjuster to adjust the RF CHANNEL control to a channel which is not active in your area.

Now that the VCR has been tuned to your TV, you may use the VCR.

From now on, whenever you play back a cassette, you should select the programme position which you have selected in step 1.

This programme position is called "programme position for the VCR".



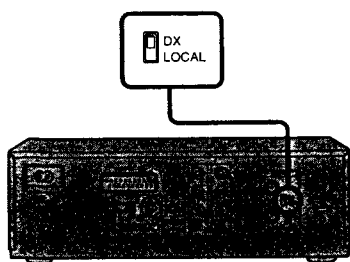

## If the TV signal is too strong

The DX/LOCAL switch is provided on the rear of the VCR to strengthen and attenuate the reception signals. This switch has two setting positions. Normally set it to "DX." If the reception signals are very strong, set the switch to "LOCAL."

## Inserting Batteries

- 1 Open the lid.
- 2 Insert two R6 batteries (IEC designation) by matching the + and – on the batteries with the + and – indications in the battery compartment.
- 3 Close the lid.

### Notes on the handling of batteries

- With normal use, the batteries should last for approximately six months.
- If you do not use the Remote Commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery together with an old one. Do not use different types of batteries.




## Controlling Other Sony Video Equipment

You can control other Sony video equipment having the Command Mode, using this Remote Commander.


Set the Command Mode selector for the other equipment to VTR2.

### If other Sony video equipment does not have the command mode selector

You can control an 8 mm format VCR only. You cannot use this Remote Commander with a Betamax VCR or a VHS format VCR.

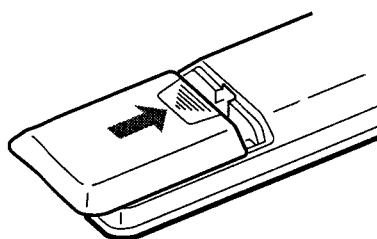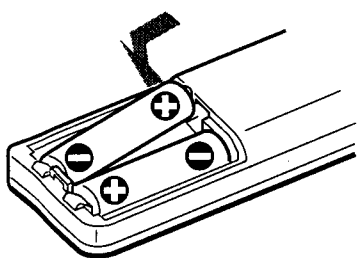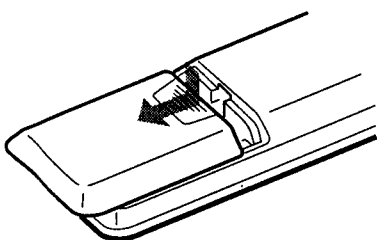

# Playback

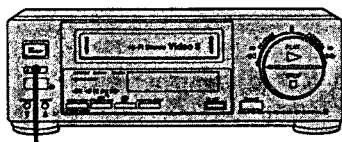


▲ EJECT

## Caution

Be careful not to allow children to stick their fingers into the cassette loading slot. This may cause injury to the fingers.

This section shows you how to play back a video cassette.

## Inserting a Video Cassette

- 1 Insert a video cassette with the window facing upwards.
- 2 Gently press the centre of the front side of the cassette until the mechanism draws it into the compartment.  
When the cassette has been inserted, the cassette indicator  lights up in the display window and the VCR turns on automatically.

## Ejecting the Video Cassette

Press ▲ EJECT on the VCR. You can eject the cassette when the power is off. When you press ▲ EJECT, the power is turned on. After ejecting the cassette, the power automatically shuts off.

## Note

You cannot eject a cassette during recording or recording pause mode.

## Cassette Care


### Notes

- Always insert the cassette in the correct position.
- Never insert anything in the small holes on the rear of the cassette.
- Store cassettes in their cases and keep them in an upright position to prevent intrusion of dust and uneven winding.
- To record from the beginning of the tape, run the VCR for about 15 seconds at the beginning of a cassette before recording.
- When the VCR is not in use, remove the cassette.
- Stick the cassette label in the designated area.
- Stick the label on securely so it will not peel off and damage the machine.

### Maximum recording time of a cassette

Cassette used	Recording/Playback Time	
	SP mode	LP mode
P5-15	15min	30min
P5-20	20min	40min
P5-30	30min	1h
P5-60	1h	2h
P5-90	1h30min	3h
P5-120	2h	4h
P5-135	2h15min	4h30min
P5-150	2h30min	5h


Rear side of a cassette

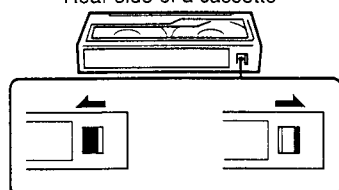

## Protecting your cassette against accidental erasure

To prevent accidental erasure, slide out the tab on the back of the cassette so that the red colour is visible.

To re-record on the cassette, slide the tab back.

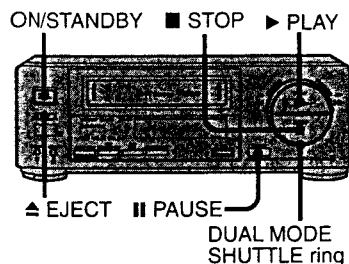

## Playing Back a Cassette

You can control playback with the identically marked buttons on either the VCR or the Remote Commander.

- 1 Insert a cassette.  
The VCR turns on automatically.

- 2 Turn on the TV.  
If your VCR has a LINE OUT or EURO-AV connection, select the AV input.  
If your VCR has an aerial connection, turn the TV to the VCR programme position for the VCR you set for the VCR in "Tuning the VCR to your TV" on page 8.

- 3 Press ► PLAY.

### To stop playback

Press ■ STOP.

### To stop playback for a moment

Press || PAUSE.

Press || PAUSE again or press ► PLAY to resume playback.

### To advance the tape rapidly

**VCR:** Press ■ STOP, then turn the DUAL MODE SHUTTLE ring clockwise.

**Remote Commander:** Press ■ STOP, then ►► FF.

### To rewind the tape

**VCR:** Press ■ STOP, then turn the DUAL MODE SHUTTLE ring counterclockwise.

**Remote Commander:** Press ■ STOP, then ◀◀ REW.

### To view the picture during fast forward mode or rewind mode

You can view the picture momentarily while the VCR is in fast forward or rewind mode.

Keep pressing ►► FF during fast forward, and keep pressing ◀◀ REW during rewind. Release the button to return to fast forward or rewind.

### To eject the cassette

Press ▲ EJECT on the VCR.

Pressing ▲ EJECT when the VCR is turned off will turn the VCR on, eject the cassette and then turn it off again.

### When the tape reaches the end during playback

The VCR automatically rewinds the tape to the beginning and the power remains on.

### To turn the VCR on or off

Press ON/STANDBY on the VCR and ⏻ on the Remote Commander.

## Auto Play



### Never unplug the mains lead cord while a tape is moving


This may cause the tape to be jammed in the VCR. When you need to unplug the mains lead, be sure to remove the cassette or turn off the power of the VCR.

You can start playback automatically after rewinding a cassette.

This operation works only on the VCR. (You cannot use AUTO PLAY with the Remote Commander.)

Press ► PLAY while you turn the DUAL MODE SHUTTLE ring counterclockwise fully.

Playback starts automatically after the tape is rewound to the beginning of the tape.

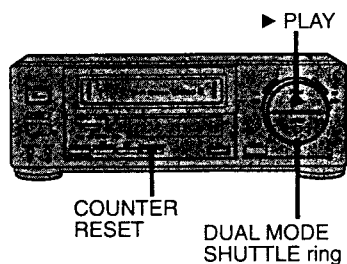

## Indexing the Tape Contents

Before recording or playback, press COUNTER RESET to reset the counter to zero. This counter is a "linear time counter," which shows you how much the tape has run in terms of time. By noting the setting, you can find that point later by referring to the counter. Use the label on a cassette to list the programmes and their counter readings. Since the counter is not very accurate, use it only for reference.

## Locating a Particular Scene Later

If you want to return to a particular scene later, press COUNTER RESET on the VCR at the desired scene so that the linear time counter resets to "0H00M00S."

### To return to the desired scene

Press TAPE RETURN on the Remote Commander while the VCR is stop mode.

The tape rewinds to the position where the counter reads "0H00M00S", and stops.

### To start playback of the scene

Press ► PLAY.

## Listening More Easily to Conversation Recorded with a Camcorder

When you press VOICE BOOST on the Remote Commander while playing back a tape recorded with a camcorder, the human voice portion of the sound is enhanced so that it is easier to hear conversation. VOICE BOOST reduces the sound of wind and other "unwanted" background noise.

## Selecting the Monitor Sound


You can select the sound you want to hear when you play a bilingual tape.

Press AUDIO MONITOR on the Remote Commander. With each press, you can select main sound, sub sound, or main and sub sound. The monitor sound indicators will tell you what sound you are selecting.

When you playback a monaural tape, the indicator will not light up and the button will become inoperative.

Lighted monitor sound indicators on the VCR front panel	Sound heard
MAIN/L	Main sound
SUB/R	Sub sound
MAIN/L and SUB/R	Main and sub sound


**If you record the bilingual programme in the stereo mode,** the programme can be played back in main (L) or sub (R) sound by pressing AUDIO MONITOR. Even if you select only one channel (right channel or left channel), the slight sound of unselected channel will be heard.

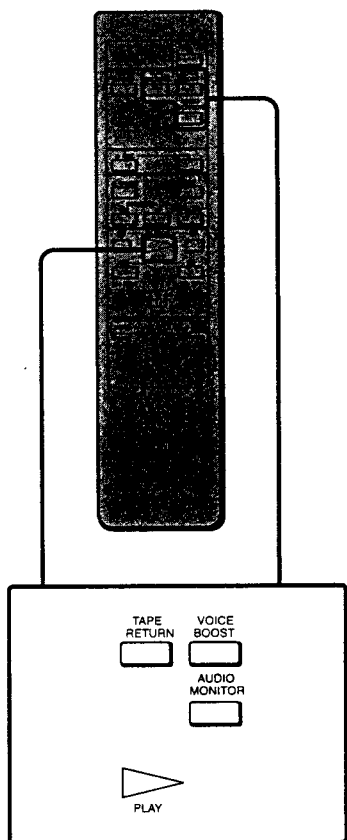

### Notes on counter reading

- The counter does not work on unrecorded portions of the tape.
- After a cassette is ejected, the counter reading is retained. When a cassette is inserted in the VCR, the counter reading automatically returns to "0H00M00S."
- The linear time counter installed in this VCR is not a clock. There is a difference between the actual recording and playback time, and the counter display. This difference may increase when switching the tape speed from SP to LP and vice-versa, or depending on tape position being played back.

# Recording

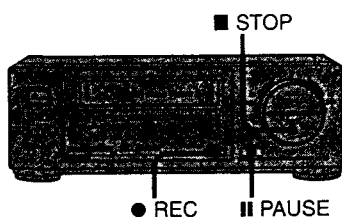

This section shows you how to record. If you make a LINE IN connection from other video equipment such as a video camera recorder (camcorder), you can record audio/video signals.

## Before You Begin

Before you begin, check the following points:

- Make sure that the connections have been made correctly (see page 7).
- Make sure the cassette is long enough to record the source programme.
- Make sure the safety tab of the cassette has not been slid out. If you insert a cassette with the safety tab visible in red (closed) and press ● REC, the cassette automatically ejects from the VCR.

## Recording a Video Programme while Watching it

- 1 Insert a cassette.  
The VCR turns on automatically.
- 2 Turn on the TV.
- 3 If your VCR has a LINE OUT or EURO-AV connection, select the AV input.  
If your VCR has an aerial connection, turn the TV to the VCR programme position you set for the VCR in "To tune the VCR to your TV" on page 8.
- 4 Select SP or LP with TAPE SPEED on the Remote Commander.  
To select the best recording tape speed, see "Maximum recording time of a cassette" on page 10.
- 5 Press both ● RECs on the Remote Commander at the same time, or ● REC on the VCR.  
The REC indicator on the VCR lights up.

### To stop recording

Press ■ STOP.


### To pause recording



Press ■ PAUSE.

### To resume recording

Press ■ PAUSE.

If the recording pause exceeds 7 minutes, the VCR stops.

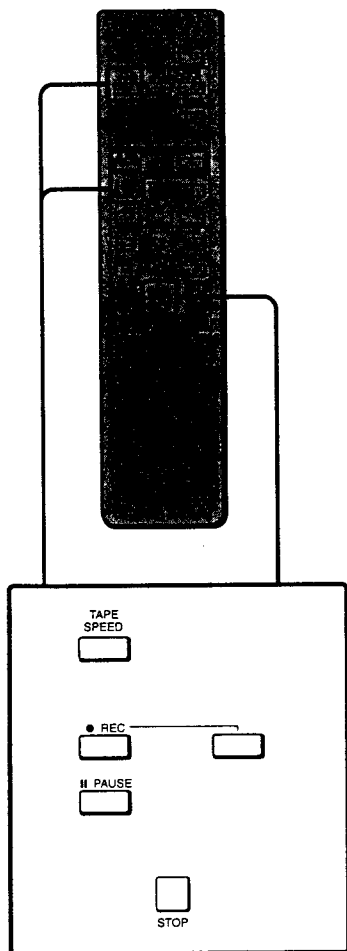

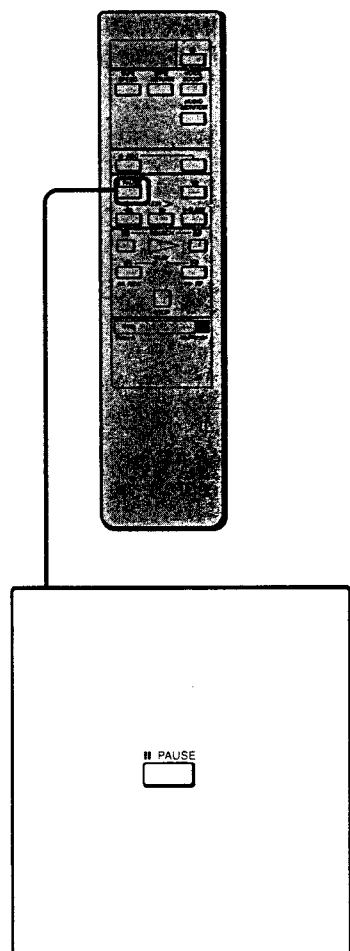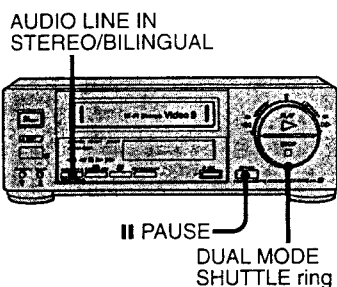

## Pausing

### Technique 1

You can stop recording an unwanted scene and resume recording smoothly.

- 1 Press **II PAUSE** when an unwanted scene appears.  
Recording will stop and the VCR enters recording pause mode.
- 2 Press **II PAUSE** at the ending of the unwanted part, to release pause mode.  
Recording resumes from the point set in step 1.

### Technique 2

When an unwanted scene has already started recording, you can rewind the cassette to the beginning of the unwanted part, have the VCR standby in recording pause mode, and resume recording when the unwanted scene is over.

- 1 Press **II PAUSE** to set the VCR to recording pause mode.
- 2 Turn the DUAL MODE SHUTTLE ring on the VCR counterclockwise or clockwise to search for the point from which you wish to continue recording.
- 3 Release the DUAL MODE SHUTTLE ring on the VCR at the desired point.  
After an instant in still mode, the VCR automatically enters recording pause mode.
- 4 Press **II PAUSE**.  
Recording resumes.



## Selecting the Audio Input from the External Source



You can select the sound you want to record when you recorded a stereo or bilingual pre-recorded programme from other equipment such as a VHS-format VCR.

Press **AUDIO LINE IN STEREO/BILINGUAL** on the front of the VCR. For each press, you can select the sound to be recorded. The lighted sound indicators will show you what sound you are recording.

### When recording

Sound mode	Lighted monitor sound indicators on the VCR front panel	Monitor sound
STEREO	STEREO	STEREO sound
BILINGUAL	MAIN/L	MAIN sound
	SUB/R	SUB sound
	MAIN/L and SUB/R	MAIN+SUB sound


AUDIO LINE IN  
STEREO/BILINGUAL

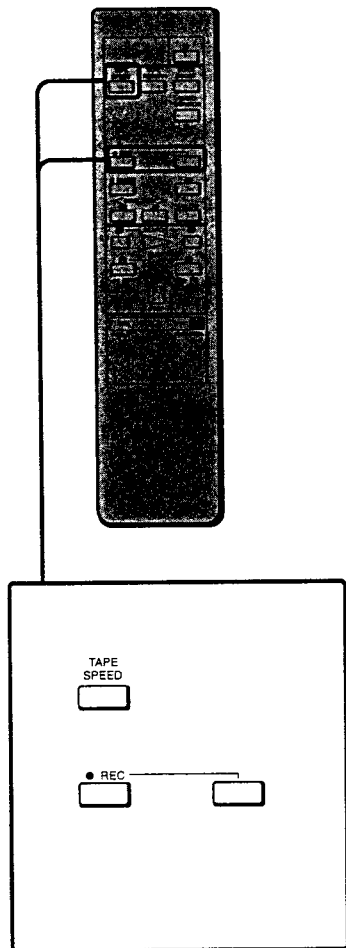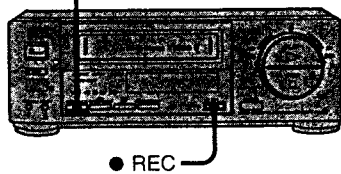

## Recording TV programmes

Since the VCR itself doesn't have a built-in tuner, you can't record TV programmes if you have made a VCR-TV connection using 1A, 1B or 1C of Audio/Video (A/V) Hookup on page 7, or Aerial Hookup on page 8.

However, if your TV has line output jacks, you can record TV programmes. You will need to make an additional connection. If you have made a VCR-TV connection using 1D of Audio/Video (A/V) Hookup, you can record TV programmes without making an additional connection.

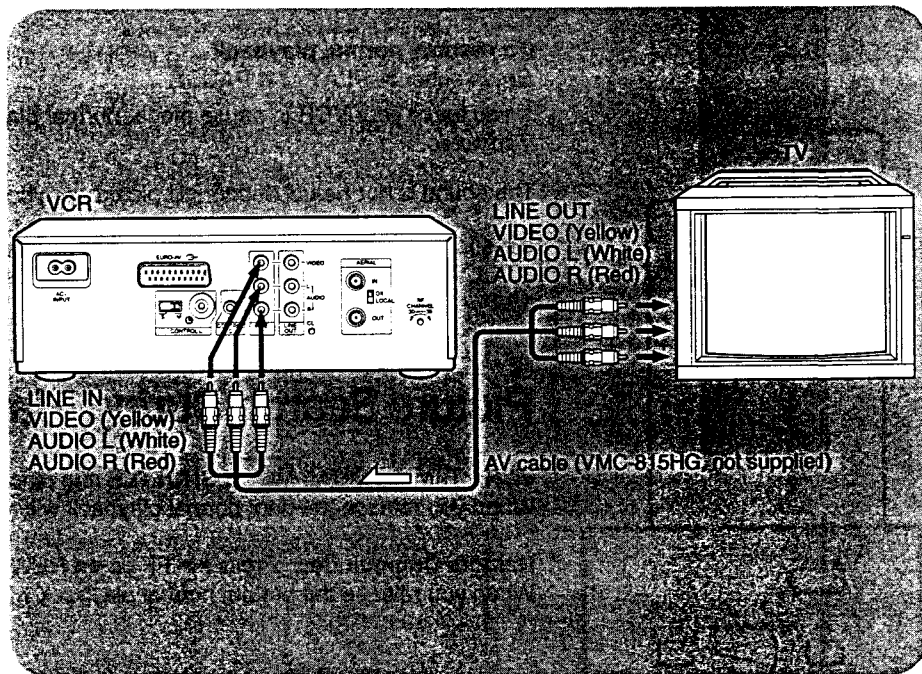


- 1 Turn on the TV and select the TV programme you want to record on the TV.
- 2 Insert a cassette into the VCR.
- 3 Select SP or LP with TAPE SPEED on the Remote Commander.
- 4 Select the sound with AUDIO LINE IN STEREO/BILINGUAL on the front of the VCR.
- 5 Press both ● RECs on the Remote Commander at the same time, or ● REC on the VCR.

You should keep the TV on while you are recording TV programmes.



# Variable Speed Playback

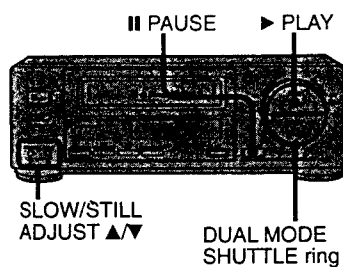

The following section explains the advanced playback functions available on your VCR.

Using the DUAL MODE SHUTTLE ring on the VCR or ►► FF and ◀◀ REW on the Remote Commander, you can play a cassette at a variety of forward and reverse speeds. You can also freeze a picture using the pause function.

## Still Picture

During playback, press ■ PAUSE to hold the picture in one place.


### To resume normal playback

Press either ► PLAY or ■ PAUSE.

If you leave your VCR in pause mode, normal playback resumes after approximately 7 minutes.

The sound is not heard during still picture playback.

If a still picture shakes up and down or has streaks, you can adjust it using SLOW/STILL ADJUST ▼/▲ on the front of the VCR. (See "Tracking Adjustment" on page 18.)

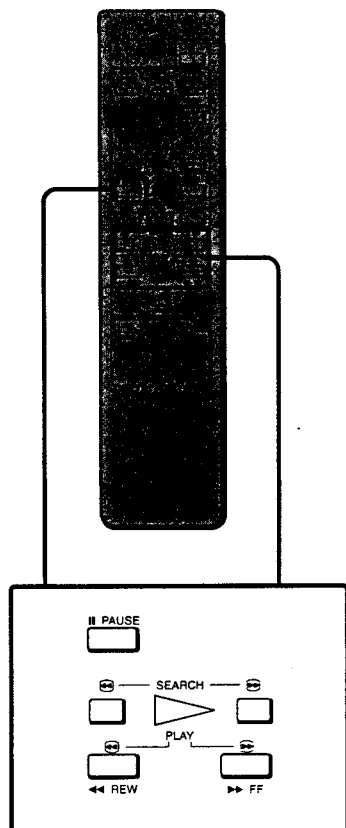

## Picture Search During Playback

**VCR:** Turn the DUAL MODE SHUTTLE ring clockwise or counterclockwise. When you release the ring, normal playback will resume.

**Remote Commander:** Press ►► FF or ◀◀ REW.

When you release the button, normal playback will resume.

## Locked Picture Search



This feature works only when using the Remote Commander.

Press ⊞ or ⊞ SEARCH on the Remote Commander during playback or playback pause. If you press ⊞ SEARCH, the VCR enters locked picture search mode in the reverse direction. If you press ⊞ SEARCH, the VCR enters locked picture search mode in the forward direction.


### To resume normal playback

Press ► PLAY.

### Notes on playback in SP mode

- When viewing the picture in variable speed playback mode, the picture may shake vertically or the colour may become black and white, depending upon the TV you are using.
- During picture search, several streaks will appear on the TV screen. This is normal.  
If you play back a tape recorded in SP mode, a wider streak will appear on the TV screen during picture search.
- If you perform picture search with the VCR connected to your TV via AERIAL OUT, you may hear a slight sound such as a buzzing sound.
- When you perform a variable speed playback in the reverse direction, a wider streak appears on the screen, especially in SP mode. This is normal.



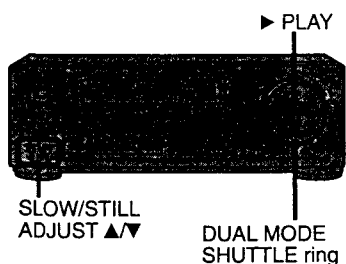

## x 2 (Double), -x 2 (Reverse Double) Speed Playback

### VCR:

Slowly turn the DUAL MODE SHUTTLE ring clockwise (in the forward direction) or counterclockwise (in the reverse direction) until the tape is played back in the forward or reverse direction at a speed double the normal playback.

### To return to normal playback

Release the ring.

### Remote Commander:

Press x2.

### To play back in the reverse direction

Press < DIRECTION.

### To resume the forward direction


Press DIRECTION >.

### To return to normal playback

Press ► PLAY.

The sound is heard but distorted during forward double-speed playback and the sound is muted during reverse double-speed playback.

If a picture shakes up and down or has streaks during forward double-speed playback, you can adjust it using SLOW/STILL ADJUST ▼ or ▲ on the front of the VCR. (See "Tracking Adjustment" on page 18.)

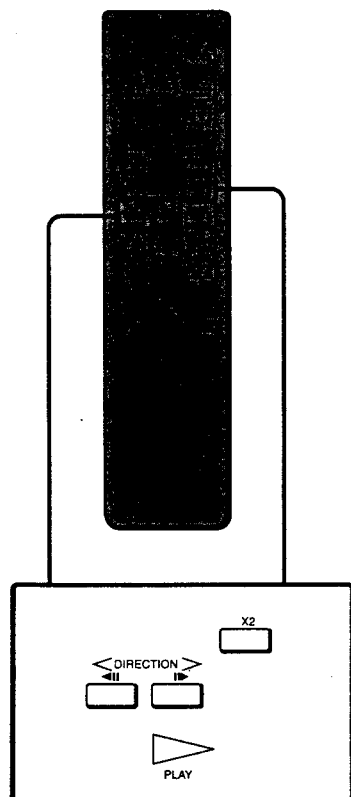

## -x 1 (Reverse) Speed Playback

### VCR:

Gently turn the DUAL MODE SHUTTLE ring counterclockwise until the VCR enters reverse slow motion playback mode. After a slow motion picture appears on the TV screen, you can view a -x 1 (reverse) playback picture. Hold the DUAL MODE SHUTTLE ring at that point.

### Remote Commander:

Press ► PLAY, then < DIRECTION.

### Notes

- It takes about two or three seconds to reverse the direction in slow motion mode or frame-by-frame mode.
- When the tape speed is switched, noise appears a moment.
- If a tape has portions recorded in both SP and LP modes, the VCR will automatically adjust the tape speed during reverse/forward slow motion playback. However, you will not notice any change during x2 playback even though the tape speed is actually switched from SP to LP or LP to SP.



## Frame - by - Frame Picture



During playback pause, press DIRECTION > to advance the picture one frame or < DIRECTION to reverse the picture one frame. Each time you press the button, the picture moves one frame.

### To resume normal playback

Press ► PLAY.

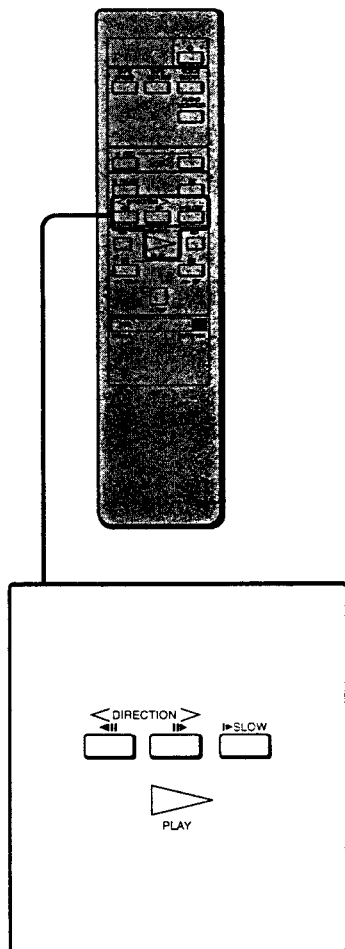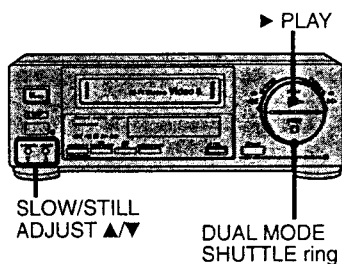

## Slow Motion Playback

### VCR:

Slowly turn the DUAL MODE SHUTTLE ring clockwise (in the forward direction) or counterclockwise (in the reverse direction) until the tape is played back in slow motion in the forward or reverse direction.

### To return to normal playback

Release the ring.

### Remote Commander:

Press ► SLOW.

### To play back in the reverse direction

Press < DIRECTION.

### To resume forward direction

Press DIRECTION >.

### To return to normal playback

Press ► PLAY.

The sound is muted during reverse slow motion playback.

If you leave the VCR in slow motion mode for more than one minute, the VCR will automatically return to normal playback.

If a slow motion picture shakes up and down or has streaks, you can adjust it by pressing SLOW/STILL ADJUST ▼ or ▲ on the VCR. (See "Tracking Adjustment" below.)



## Tracking Adjustment



If a picture shakes up and down or has streaks during forward double-speed playback, still playback, slow motion playback (in the forward and reverse direction), you can adjust it using SLOW/STILL ADJUST ▼ or ▲ on the front of the VCR.


However, the adjustment can't be performed while you are turning the DUAL MODE SHUTTLE ring. Use the Remote Commander, therefore, for operating still picture, slow motion, and x2 playback.

Press and hold SLOW/STILL ADJUST ▼ or ▲ on the VCR until you obtain the best possible picture on the TV screen.

### Note

It is necessary to adjust tracking for both the SP and LP modes.



# Cutting out the Unwanted Scenes – SHUTTLE EDIT

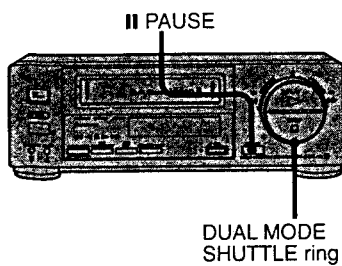

## During Recording



If you wish to cut out unwanted scenes, you can pause recording and rewind the tape until the beginning of an unwanted scene is reached. You can then record over it. This feature is controlled using the DUAL MODE SHUTTLE ring on the VCR.

- 1 Press **II PAUSE** during recording.  
The VCR enters recording pause mode.
- 2 Turn the DUAL MODE SHUTTLE ring on the VCR counterclockwise to rewind the tape until the unwanted scene appears.

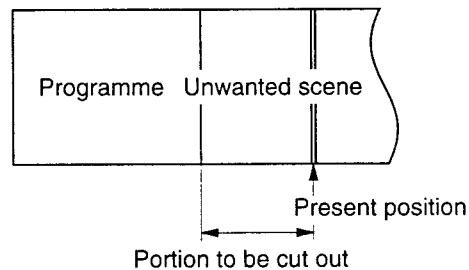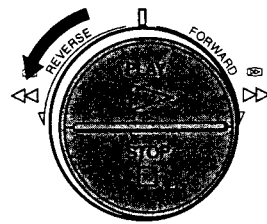

Turn the ring slightly. During rewinding, the screen changes to the playback picture, but sound is not switched. When you release the ring, the VCR enters recording pause mode.

- 3 Press **II PAUSE** again to release the pause when a scene you want to cut out appears on the screen.  
Recording starts.

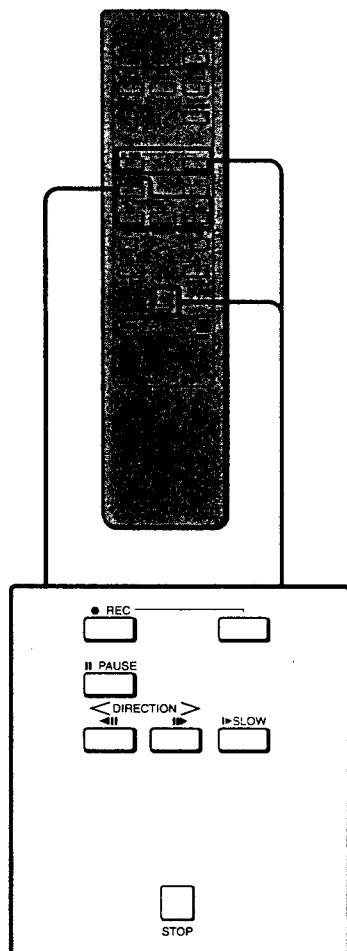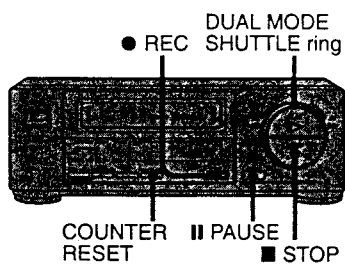

## During Playback

You can re-record onto an unwanted portion of a pre-recorded cassette using the DUAL MODE SHUTTLE ring on the VCR.

- 1 Press **PAUSE** at the end of the unwanted scene during playback.  
The VCR enters playback pause mode.
- 2 Press **COUNTER RESET** on the VCR to set the linear counter to "0H00M00S."
- 3 Turn the **DUAL MODE SHUTTLE ring** on the VCR until the beginning of the unwanted scene appears on the screen.  
When you release the ring, the VCR enters playback pause mode.  
Use **<DIRECTION>** on the Remote Commander to rewind or advance the picture frame by frame when searching for more specific points.
- 4 Press **REC**.  
The VCR enters recording pause mode.
- 5 Select a new programme source for re-recording.
- 6 Press **PAUSE** again to release the pause when the scene to be recorded begins to appear on the screen.  
Recording begins.
- 7 Press **STOP** when the linear counter shows "0H00M00S."

### Note

The picture may be distorted a moment at the cut-out point (recording end point).

# Overview of the Editing Functions

Using a second VCR, you can record programmes from one VCR to the other. The following are the tape editing functions available on the VCR. You can perform these editing using the synchronized editing function or manually (not using the synchronized editing). In this section, the editing using the synchronized editing function will be mainly explained.

- **To make a copy of a tape**


See "Tape Dubbing" on page 22.



- **To edit out unwanted scenes using the synchronized editing function (Synchronized Assemble Editing)**


You can also use the synchronized editing function if your other VCR has a control L connector. Using this function controls both the playback VCR and the recording VCR simultaneously from the VCR the LANC mode of which has been set to "M."

➔ See "Synchronized Assemble Editing" on page 28.

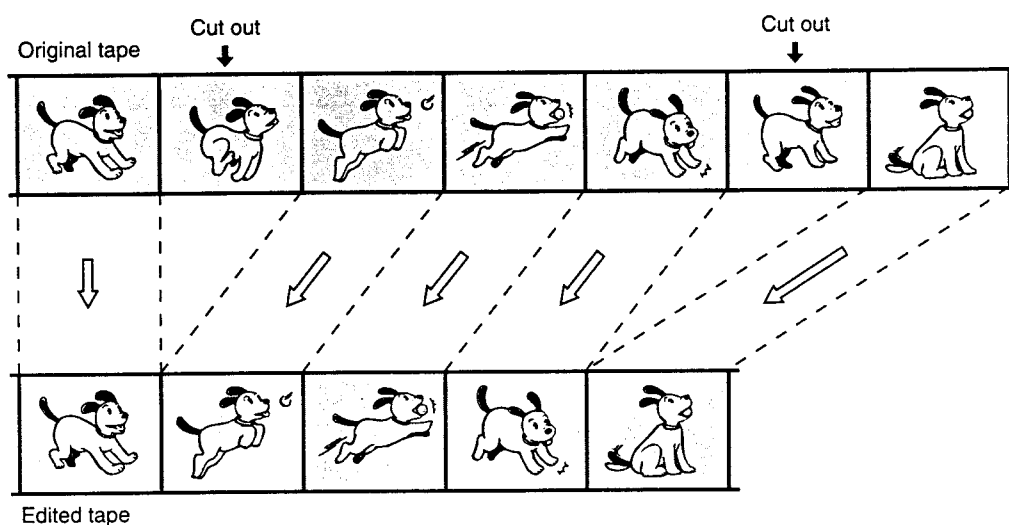

- **To insert another scene into a tape**

➔ See page 28.

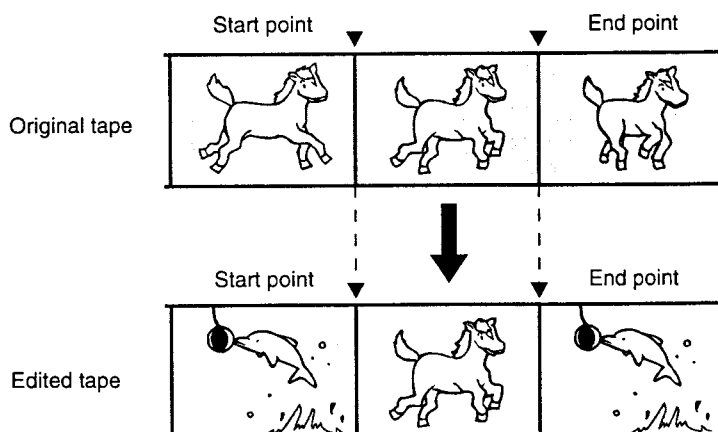


# Tape Dubbing

## Editing from the Other VCR


Here's how to edit from another VCR (such as an 8 mm video camera recorder, a VHS-format VCR or a Betamax VCR for playback) when using this VCR for recording.

### Connection

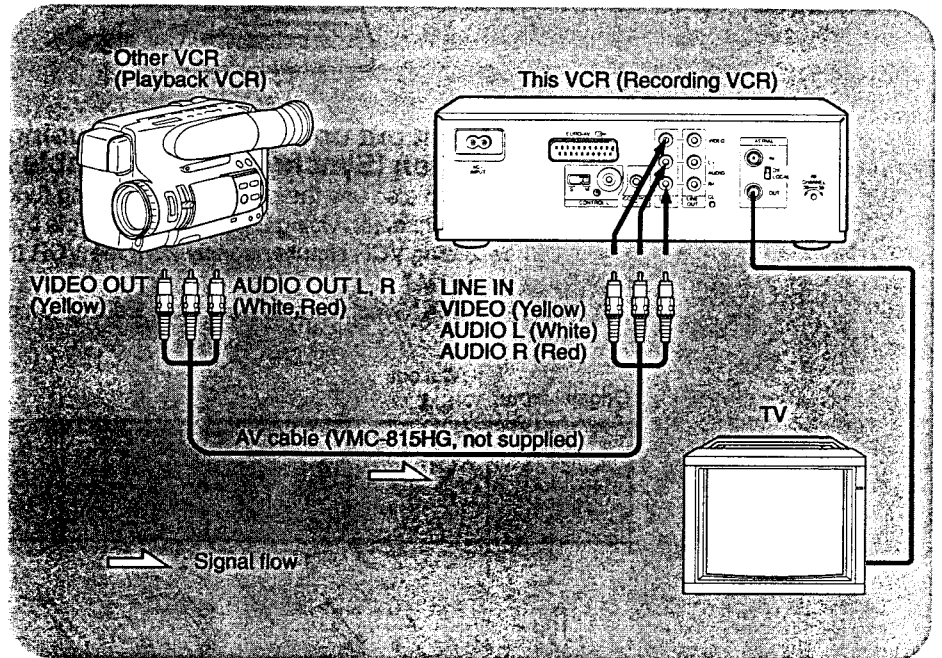

### Notes

- When connecting the VCRs, do not connect them so that both VCRs are used as a recording VCR and a playback VCR. Doing so may cause a humming noise.
- To avoid deterioration of picture quality, remember to switch on the EDIT function of the other VCR if the EDIT function is provided with that VCR.
- If your playback VCR is a monaural unit, connect the white plug to the AUDIO OUT jack of the playback VCR and leave the red plug unconnected. At the same time, do not connect the red plug of the other AUDIO R jack of this VCR (recording VCR).
- If your playback VCR is a EURO 21-pin type, use the VMC-216 cable (not supplied).

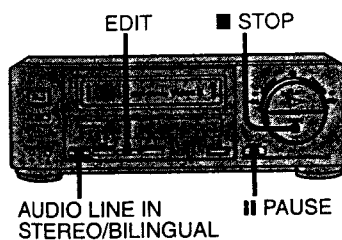

## Before You Begin

- Select the tape speed (SP or LP) with TAPE SPEED on the Remote Commander.
- Press AUDIO LINE IN STEREO/BILINGUAL to select the sound to be recorded if you record a stereo or bilingual tape.
- Press EDIT on the VCR so that the EDIT indicator lights up.


### Note

If your playback VCR also has an editing function, select it to reduce static and improve reception.



## Operation

- 1 Insert a blank cassette into this (recording) VCR.
- 2 Turn on the other (playback) VCR and insert a source cassette.
- 3 Locate the playback starting point and select the playback pause mode on the other VCR.
- 4 Locate the recording starting point and select the recording pause mode on this VCR.
- 5 Press PAUSE on both VCRs.  
For best results, press PAUSE on the other VCR just before pressing PAUSE on this VCR.  
When you've finished editing, press STOP on both VCRs.

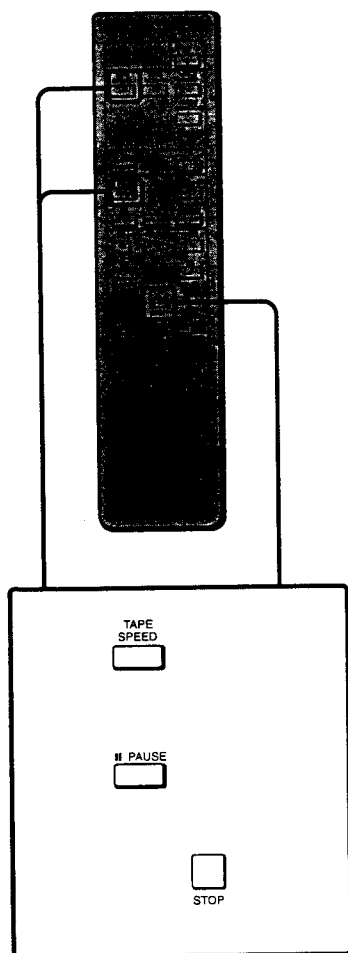

### What is the EDIT function?


This function avoids deterioration of picture on the duplicated tape if you activate it when dubbing tapes.

# Editing onto the Other VCR

Here's how to edit from this VCR (as the playback VCR) onto the other VCR (as the recording VCR).

## Notes

- If your recording VCR is a monaural unit, connect the white plug to the AUDIO IN jack of the recording VCR and the yellow plug to VIDEO IN jack using the RK-C72 cable (not supplied).
- If your recording VCR is a EURO 21-pin type, use the VMC-216 cable (not supplied).
- When connecting the VCRs, do not connect them so that both VCRs are used as a recording VCR and a playback VCR simultaneously. Doing so may cause a humming noise.

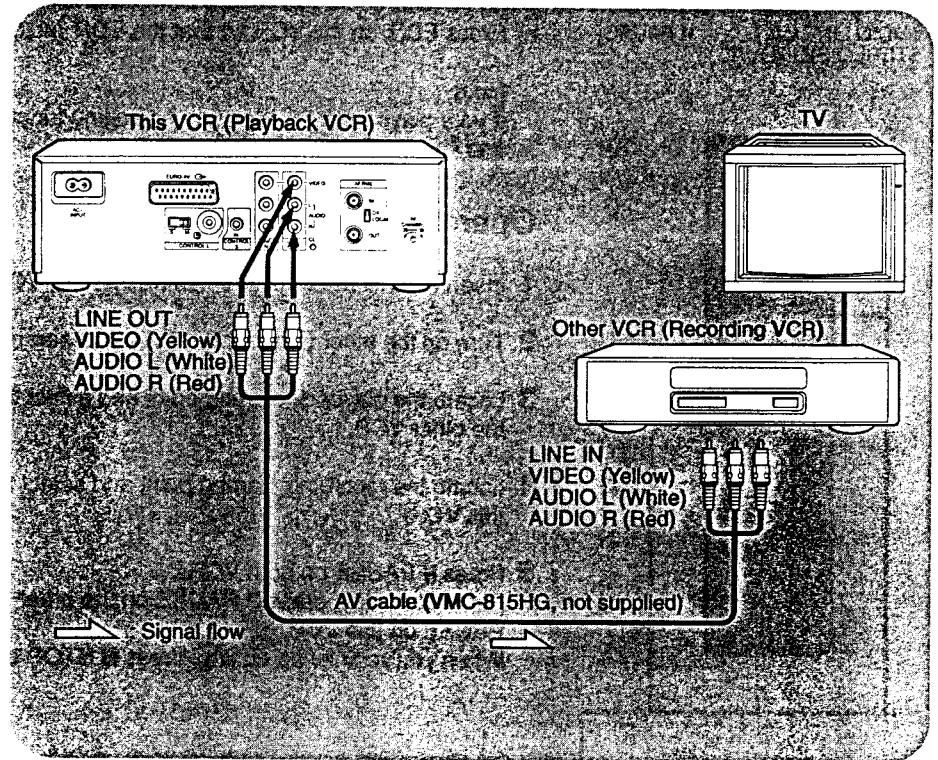

## Before You Begin

Press EDIT on this VCR so that the EDIT indicator lights up.




### Note

If the other VCR has an editing function, it should also be selected to improve reception.


## Operation

- 1 Turn on the other (recording) VCR and insert a blank cassette.
- 2 Insert a source cassette into this (playback) VCR.
- 3 Locate the playback starting point and select playback pause mode on this VCR.
- 4 Locate the recording starting point and select recording pause mode on the other VCR.
- 5 Press **II PAUSE** on both VCRs.  
For best results, press **II PAUSE** on this VCR just before pressing **II PAUSE** on the other VCR. When you've finished editing, press **■ STOP** on both VCRs.

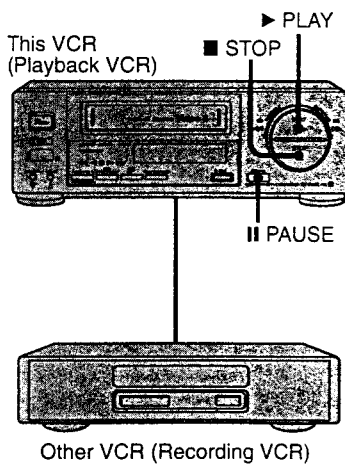




# Synchronized Editing

If your other VCR has a control L  or control S OUT connector, you can take advantage of a feature called "Synchronized Editing" that controls both VCRs (recording VCR and playback VCR), and releases the pause when SYNCHRO EDIT button is pressed. To use this function, you must connect a designated control cable (Control L or S cable) in addition to the connections of the audio and video cables. There are two types of control cables: control L (REMOTE) cable and control S cable according to the type of connectors of the VCRs. After you have made the connections on this and following pages, you must set the LANC mode. For details, see page 27.

## Connecting Video Equipment with the LANC Connector

### Notes

- When connecting the VCRs, do not connect them so that both VCRs are used as a recording VCR and a playback VCR simultaneously. Doing so may cause a humming noise.
- If your playback VCR is a monaural unit, connect the white plug to the AUDIO OUT jack of the playback VCR and leave the red plug unconnected. At the same time, do not connect the red plug of the other end to the LINE IN AUDIO R jack of this VCR (recording VCR).
- If your playback VCR is a EURO 21-pin type, use the VMC-216 cable (not supplied).
- If another VCR has both the LANC connector and the CONTROL S connector, use the LANC connector. Do not make the LANC and CONTROL S connections simultaneously.

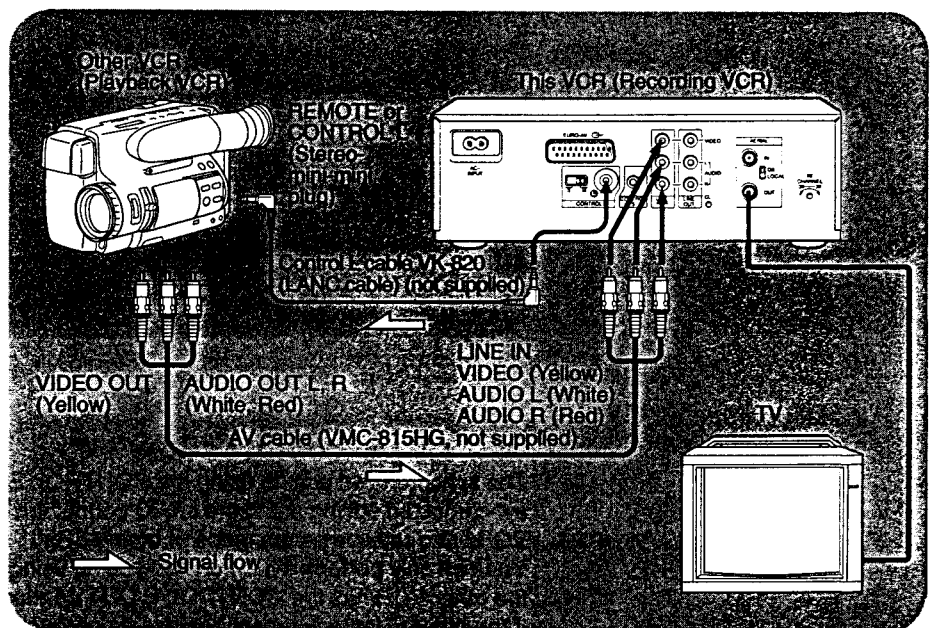


### About the (LANC)

LANC stands for Local Application Control System.

The LANC connector is used for controlling the tape transport of video equipment and peripherals connected to it. This connector has the same function as the connectors indicated as CONTROL L or REMOTE.

## Connecting Video Equipment with the CONTROL S Connector

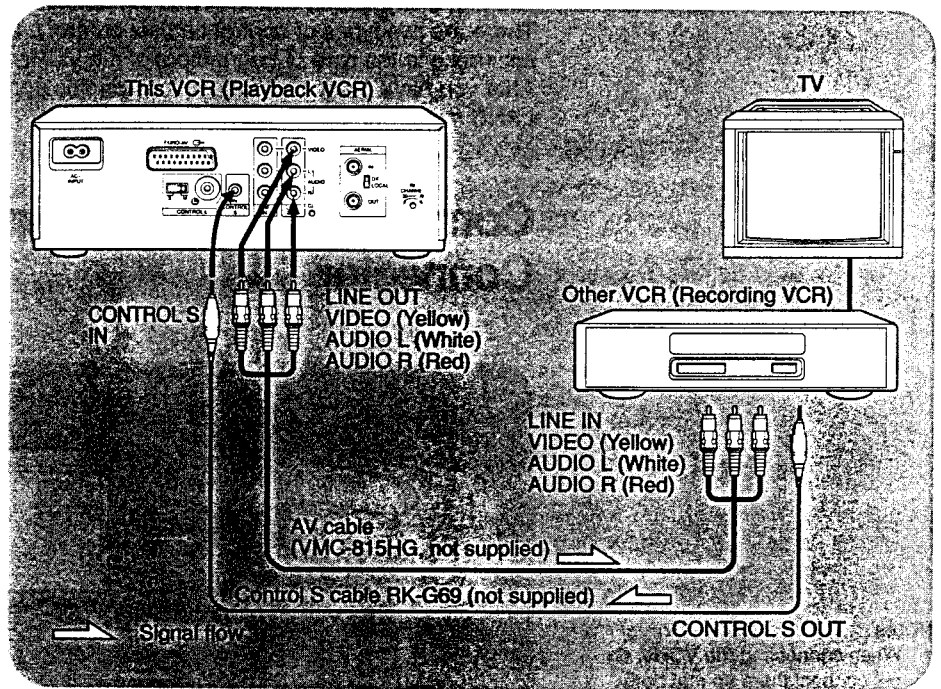

### When using the CONTROL S cable

The synchronized editing using the CONTROL S connector is the same as the synchronized editing using the LANC connector. This enables you to pause both VCRs and release pause mode of both VCRs.

You can only perform synchronized editing using the CONTROL S IN connector when the other VCR has the CONTROL S OUT connector.


If the other video equipment has the synchronized function, use the SYNCHRO EDIT button on the other equipment.

Set the command mode of this VCR and the other video equipment to the same position.



## LANC Mode Setting

When you perform synchronized editing, remember to set the LANC mode as described below:

### When you want to control the other VCR from this VCR

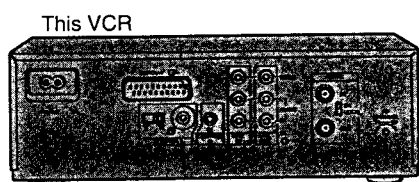




Other VCR

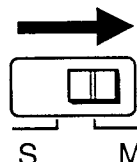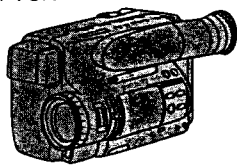

Slide the LANC mode selector located on the rear of the VCR to the "M" position.

Select "S" for LANC mode setting. For video camera recorders such as the CCD-TR series, the LANC mode is always set to "S."


### When you want to control this VCR from the other VCR

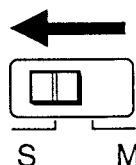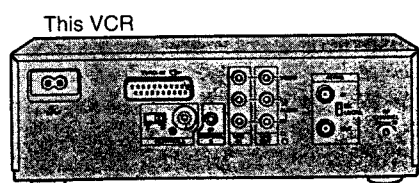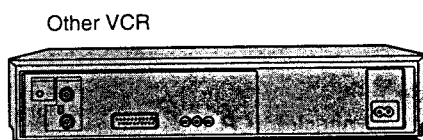

Slide the LANC mode selector located on the rear of the VCR to the "S" position.

#### Note

Do not make the CONTROL L connection between this VCR and the other VCR with the LANC mode settings of both VCRs set to the same position.

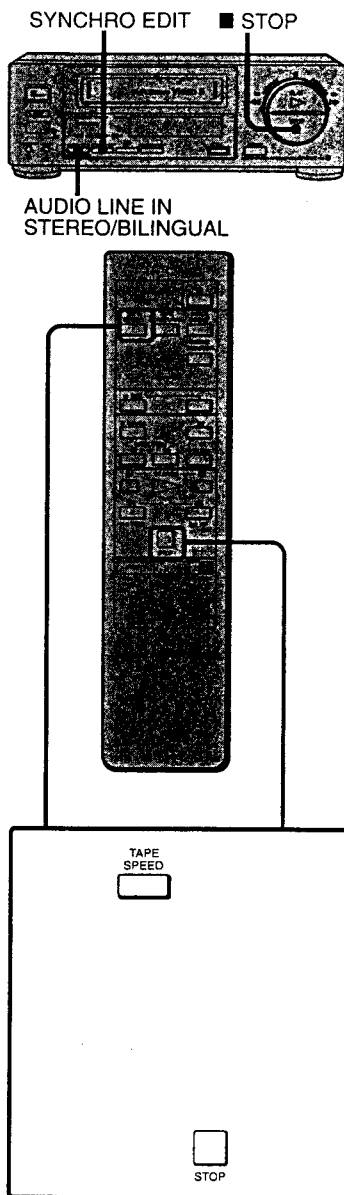

# Synchronized Assemble Editing

## Before You Begin

- Press TAPE SPEED on the Remote Commander to select the tape speed (SP or LP).
- Press AUDIO LINE IN STEREO/BILINGUAL to select the sound to be recorded if you record a stereo or bilingual tape.
- Check the LANC mode selector setting position (see page 27).



## Operation

- 1 Insert a recorded cassette into the other (playback) VCR and a cassette for recording into this (recording) VCR.
- 2 Locate the recording starting point on this VCR and put the VCR in recording pause mode.
- 3 Locate the beginning of the scene to be edited out on the other VCR and put the VCR in playback pause mode.
- 4 Press SYNCHRO EDIT on this VCR. The SYNCHRO EDIT indicator lights up. Pause mode of both the recording VCR and the playback VCR is released to start editing.
- 5 Press SYNCHRO EDIT on this VCR at the point where you want to stop recording. This VCR enters recording pause mode, and the other VCR enters playback pause mode.
- 6 If you have another scene you want to edit, repeat steps 3 to 5.
- 7 After editing has been completed, press ■ STOP on both VCRs.




**To make use of the linear counter "0H00S00M" (zero) for synchronized editing**  
You can perform synchronized insert editing when this VCR is used as the recording VCR and the LANC mode is set to "M".

When the linear counter on this (recording) VCR becomes zero during synchronized editing, the other (playback) VCR enters playback pause mode and this VCR enters recording pause mode.

### See the instructions below for operation.

- 1 Insert a recorded cassette into the other (playback) VCR and a cassette for recording into this (recording) VCR.
- 2 Locate the editing end point (a) by playing back the cassette on this (recording) VCR and press COUNTER RESET on this VCR. The counter reads "0H00M00S".
- 3 Rewind the tape on this VCR and put the VCR in recording pause mode at the ending start point (b).
- 4 To start editing, press SYNCHRO EDIT on this VCR.


When the linear counter becomes zero, the other VCR enters playback pause mode and this VCR enters recording pause mode.

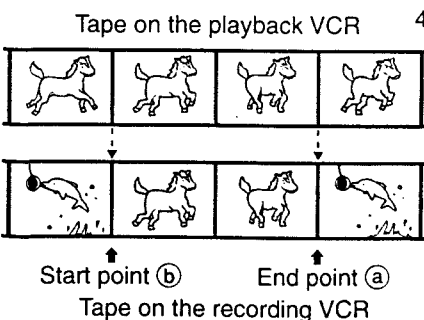

# Identifying the Parts and Controls

## Front Panel

The function of each control is explained on the page indicated in parentheses ( ).

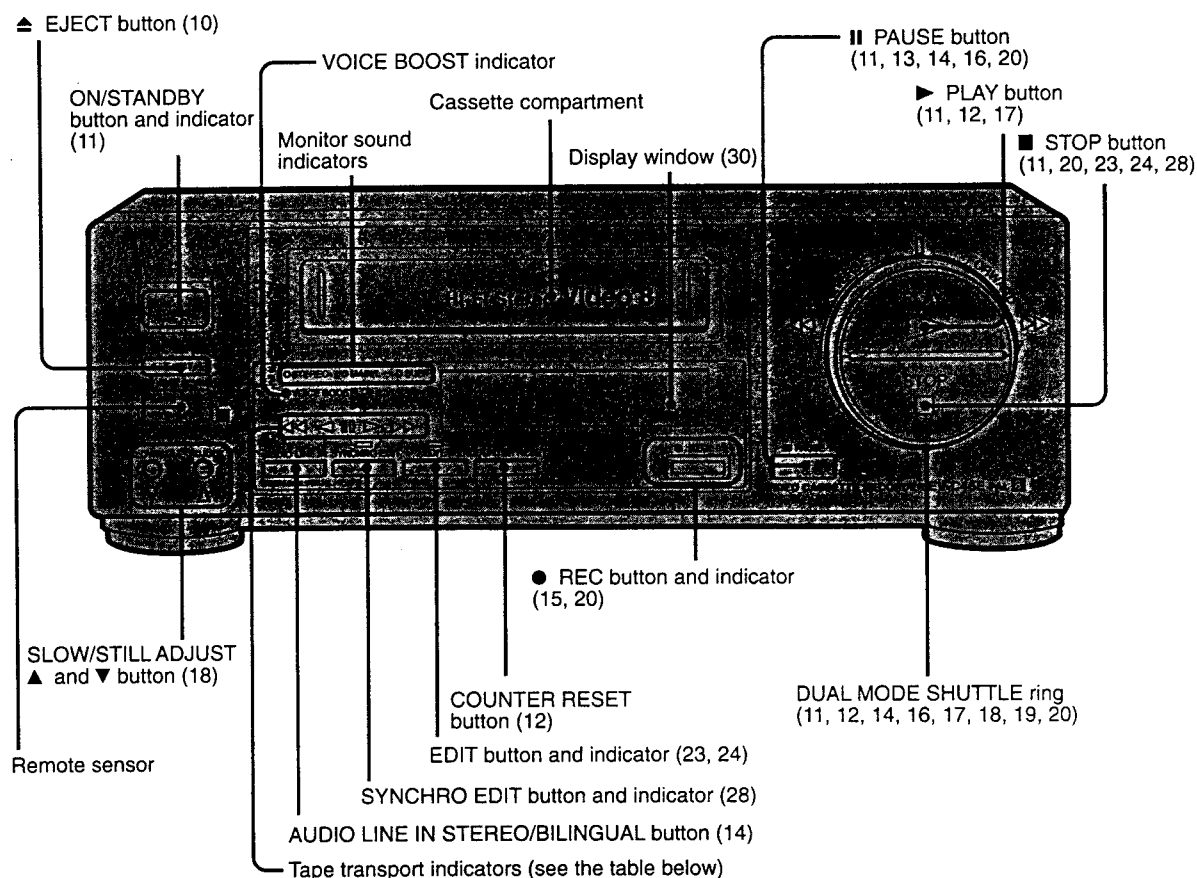


No indicator/lit	Recording *	II	Recording pause **
◀	Playback, double speed playback (reverse), Slow motion playback (reverse)	▶	Playback, double speed playback (forward), Slow motion playback (forward)
◀ II	Play pause (reverse)	II ▶	Play pause (forward)
◀◀	Rewind	▶▶	Fast forward
◀◀ ▶	Picture search, locked picture search (reverse)	▶ ▶▶	Picture search, locked picture search (forward)
◀ II ⚡	Frame-by-frame picture (reverse)	⚡ II ▶	Frame-by-frame picture (forward)
◀◀ ⚡	Auto play		

\* Only the REC indicator left side of the REC button lights up.

\*\* The REC indicator left side of the REC button lights up together with the II indicator of the tape transport indicators.


## Display Window

Each indicator is explained on the page indicated in parentheses ( ).

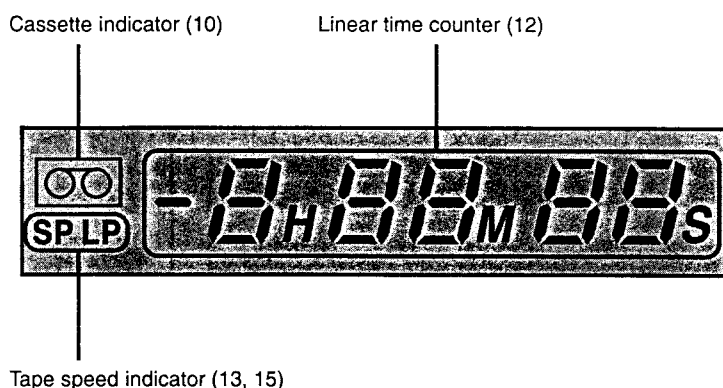


## Rear Panel

The function of each control is explained on the page indicated in parentheses ( ).

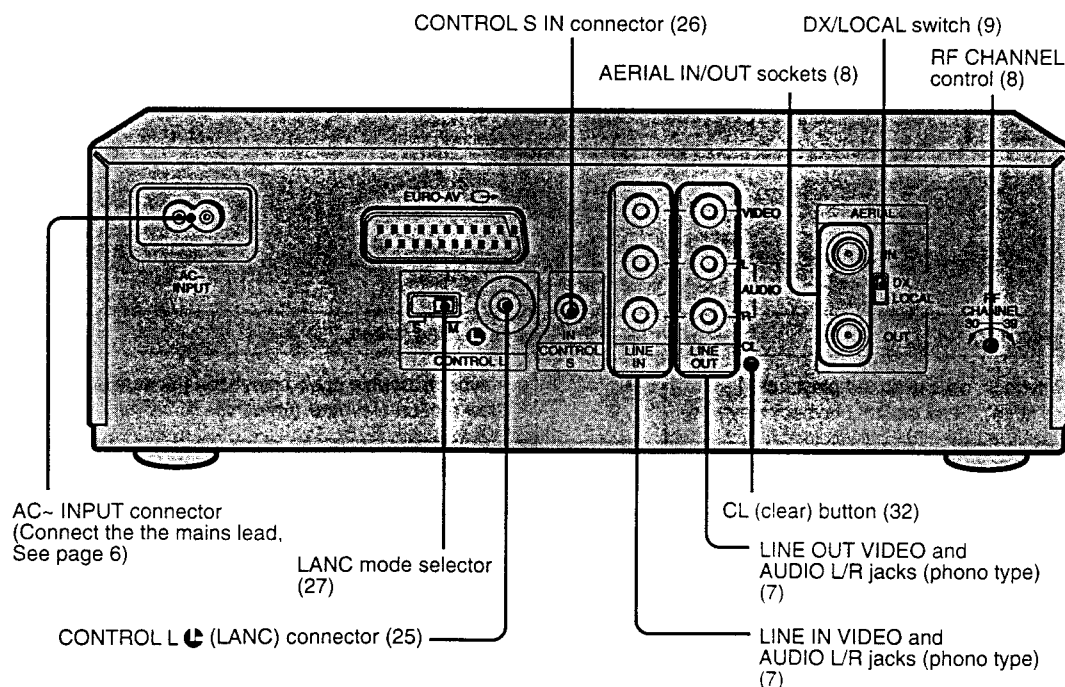

# Remote Commander

The function of each control is explained on the page indicated in parentheses ( ).

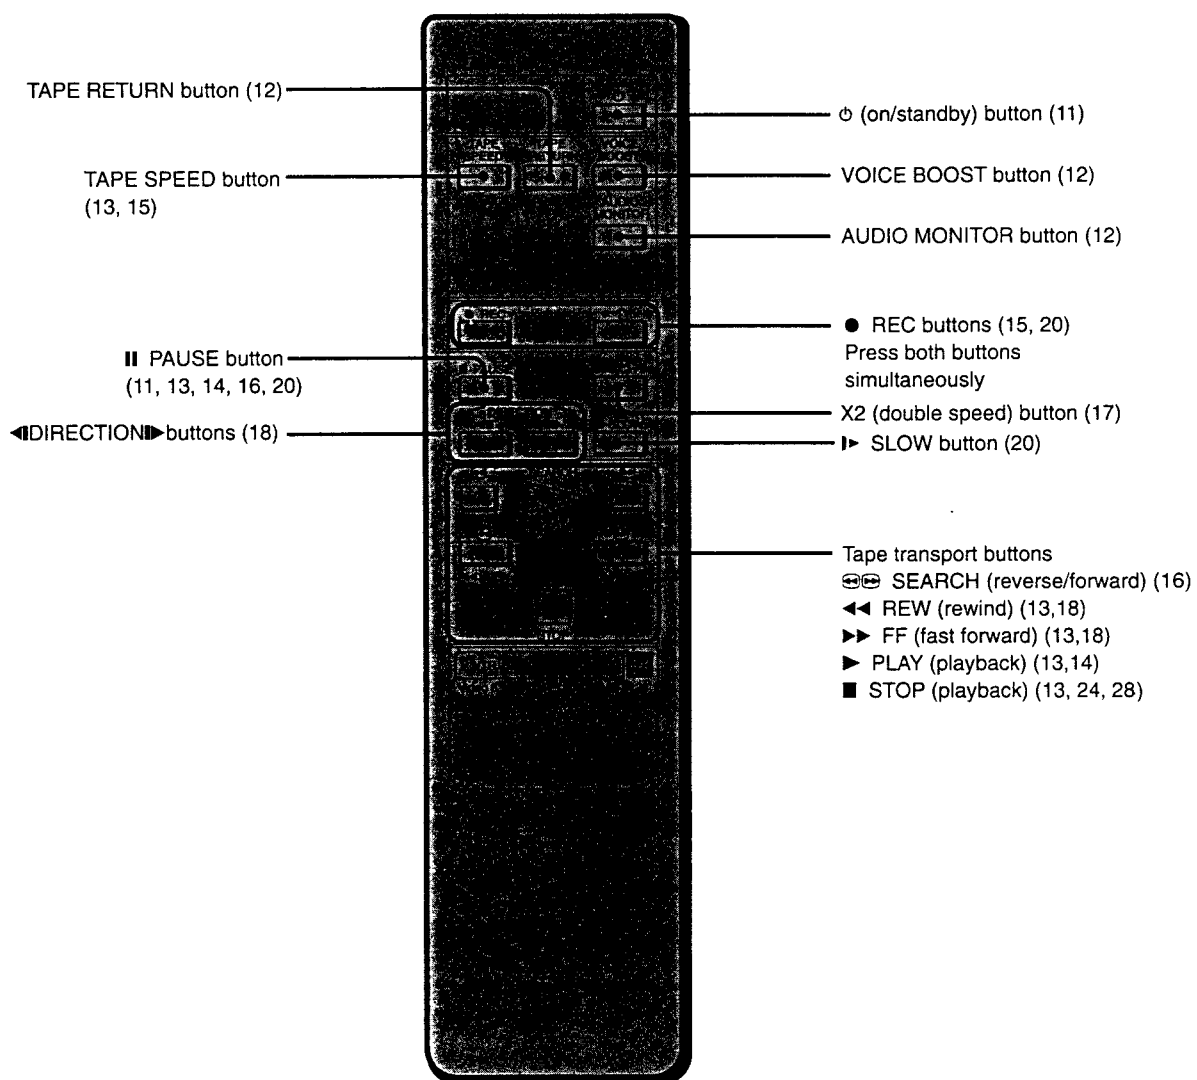

# Troubleshooting

If you have a problem with your VCR, first check the mains lead connection, then go through the following list. Should the difficulty persist, unplug the unit and contact your Sony dealer or local authorized Sony Service Centre facility.

	Symptom	Possible causes and remedies
Power	The ON/STANDBY switch doesn't work.	<ul style="list-style-type: none"> <li>The mains lead is disconnected.</li> </ul>
Playback	The VCR doesn't play.	<ul style="list-style-type: none"> <li>The tape is finished.</li> </ul>
	No picture on the TV screen.	<ul style="list-style-type: none"> <li>The VCR is not tuned to the TV.</li> <li>The VCR-TV connection is wrong.</li> <li>Clean the video head. (See page 33)</li> </ul>
	The playback picture is not clear.	<ul style="list-style-type: none"> <li>The VCR is not correctly tuned to the TV.</li> <li>The video heads are dirty. Clean the heads using the Sony V8-25 CLH Video head cleaning cassette. For details on cleaning, refer to the instructions furnished with the cleaning cassette. If a cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony Service Centre facility. (Do not use a commercially available wet-typed cleaning cassette. It may damage the video heads.</li> <li>The video heads are worn out.</li> </ul>
	Noisy picture	<ul style="list-style-type: none"> <li>Place the VCR away from a TV.</li> <li>Tape is defective. Use a new cassette.</li> </ul>
	The picture moves vertically during picture search mode.	<ul style="list-style-type: none"> <li>Adjust the vertical hold control on the TV or colour monitor.</li> </ul>
	The sound drops out.	<ul style="list-style-type: none"> <li>The cassette is defective. Use a new video cassette.</li> </ul>
Recording	A cassette is ejected If ● REC is pressed.	<ul style="list-style-type: none"> <li>Check the safety tab.</li> </ul>
	The VCR won't record.	<ul style="list-style-type: none"> <li>No cassette has been inserted.</li> <li>The cassette is at its end.</li> </ul>
Others	A cassette cannot be inserted.	<ul style="list-style-type: none"> <li>A cassette has already been inserted.</li> </ul>
	The Remote Commander cannot be operated.	<ul style="list-style-type: none"> <li>The batteries are low.</li> </ul>
	The VCR does not respond when you press any button.	<ul style="list-style-type: none"> <li>The built-in microprocessor may be defective. Pressing the CL (clear) button on the rear panel with a pointed object such as a ballpoint pen, may fix the problem.</li> </ul>
	When you perform synchronized editing, you cannot control this VCR from the other VCR.	<ul style="list-style-type: none"> <li>The LANC mode of the other VCR is set to M (See page 27).</li> <li>The LANC mode of this VCR is set to S (See page 27).</li> </ul>



# Taking Care of Your EV-C45E

## Video Head Cleaning

When playback pictures are noisy and hardly visible, or no picture screen appears, the video heads may be contaminated. In such a case, clean the video heads using video head cleaning tape V8-25CLH (not supplied) or ask Sony service personnel to clean the video heads.

### Normal picture



### Symptoms caused by contaminated video heads

- Rough picture



- Unclear picture



- No picture



Initial



Terminal

## Worn Video Heads

If the VCR displays a poor picture after you clean the video heads, you may need to replace them. Consult your dealer or the Sony Service Centre nearest you.

## Check the Video Heads after 1,000 Hours of Use

This VCR is a high-precision machine. It must record on or play back from magnetic tapes on which the image signals from the colour TV or the video camcorder are recorded.

The video head or mechanical parts for transporting the tape become contaminated or worn after extended use. You should have the VCR checked (cleaning, oiling and replacing of worn parts) after each 1,000 hours of use.

## Moisture Condensation

### • Main Unit

Do not operate the unit right after having transported it from a cold location to a warm location or in a room where the temperature rises suddenly, because moisture may condense in the operating section of the unit. Wait for about an hour before turning the power on in the new location or keep the rise in room temperature gradual. If the unit is operated with moisture condensation, the unit and the tape may be damaged.

Therefore remove the tape immediately when there is a possibility of moisture condensation and no picture is obtained. To evaporate the moisture rapidly, leave the player turned on without a tape loaded.

### • Cassette

When a cassette tape is carried from a cold place to a warm place, the cassette tape may become wet. When there is any possibility of moisture condensation, eject the cassette tape and leave it outside of the compartment for about one hour.

# Specifications

## System

Video recording system  
Rotary two-head helical scanning FM system  
Audio recording  
Rotary head, AFM system  
Video signal PAL colour, CCIR standards  
Usable cassette 8 mm video format cassettes  
Tape speed SP: approx. 20.051mm/sec.  
LP: approx. 10.058mm/sec.  
Maximum recording time  
SP: 1 hours 30 minutes  
LP: 3 hours (with Sony P5-90)  
Fast-forward and rewind time  
Approx. 4.5 minutes (with Sony P5-90 cassette)

## Inputs and outputs

Video input LINE IN VIDEO (phono jack) (1)  
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative  
Video output LINE OUT VIDEO (phono jack) (1)  
Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative  
EURO-AV (21-pin) (1)  
Output signal: pin 19 1 Vp-p, 75 ohms unbalanced, sync negative  
Audio input LINE IN AUDIO (phono jack) (2)  
Input level: -7.5 dBs  
Input impedance: more than 47 kilohms  
Audio output LINE OUT AUDIO (phono jack) (2)  
Standard impedance:  
-7.5 dBs at load impedance  
47 kilohms  
Output impedance:  
less than 10 kilohms  
EURO-AV (21 pin) (1)  
Standard impedance:  
-6 dBs at load impedance 1Kilohm  
Output impedance: less than 10 Kilohms  
CONTROL S IN Minijack  
CONTROL L stereo mini-mini jack  
RF output signal  
UK models: UHF channels B30-B39 (variable)  
Models for other countries:  
UHF channels E30-E39 (variable)  
Aerial input/output  
75 ohms asymmetrical  
aerial sockets

## General

Power requirements  
UK models: 240V AC, 50 Hz  
Models for other countries:  
220-230V AC, 50Hz  
Power consumption 12 W (max.)  
Operating temperature  
5° C to 40° C (41° F to 104° F)  
Storage temperature -20° C to 60° C (-4° F to +140° F)  
Dimensions  
Approx. 225 x 75 x 252 mm (w/h/d)  
Approx. 8 7/8 x 3 x 10 inch  
Mass  
Approx. 2.2 Kg (4 lb 14 oz)

## Remote Commander RMT-V124

Remote control system	Infrared control
Power requirements	3V DC 2 IEC designation R6 batteries

Supplied accessories, see page 5.

Design and specifications subject to change without notice.

### Note

This appliance conforms with EEC directive 87/308/EEC regarding interference suppression.

# Index

## A

- Accessories supplied 5
- Adjusting (slow,still adjust X2) 18
- Advanced operations 16 - 20
- Aerial
  - hookup 8
- Audio/video (A/V)
  - hookup 7
- Audio input from the External source
  - Bilingual 14
  - Stereo 14
- Auto Play 11

## B

- Basic operations 10 - 15
- Batteries for Remote commander 9
- Bilingual
  - tape 12
  - sound 12
- Button description 29-31

## C

- Connecting
  - Equipment 6 - 18
- CONTROL S INPUT jack (mini-type) 26
- Counter
  - counter reading 12
  - reset 12

## D, E

- Editing
  - EDIT indicator 23
  - Editing from the other VCR 22
  - Editing onto the other VCR 24
  - Overview of the editing functions 21
  - Synchronized editing 25

## F, G, H, I, J, K, L, M, N

- Lanc mode 27
- Monitor sound
  - Playback 12
  - input 14

## O, P, Q

- ON/STANDBY indicator 29
- ON/STANDBY switch 29
- Playing a Cassette
  - Frame-by-frame 17
  - Locked picture search 16
  - Slow motion 18

## R

- Recording
  - Pausing 14
  - Recording TV programmes 15
  - Stop 13
- Remote Commander
  - Inserting batteries 9

## S

- Safety instructions 4
- Setting
  - LANC mode 27
- Specifications 34
- Stereo
  - tape 12, 14
  - sound 12, 14
- Synchronized editing
  - Connection 25,26
  - Assemble 28

## T

- Tape return 12
- Tracking adjustment (see "adjusting")
- Troubleshooting 32

## U, V, W

- Variable speed playback 16
  - DUAL MODE SHUTTLE 16
  - Picture search 16
  - X2(Double), -X2(Reverse Double)
    - speed playback 17
  - X1(Reverse) speed playback 17
  - Locked picture search 16
  - Frame-by-Frame picture 17
  - Slow motion picture 18
- Voice Boost 12

